



M/R4.16.1

KNX 4CH 16A High Power Switch Actuator

KNX 8CH 16A High Power Switch Actuator M/R12.16.1

KNX 12CH 16A High Power Switch Actuator

Hardware Version: B



Issued: February 21, 2022 Edition: V1.0.2






Figure 1. 4CH 16A High Power Switch Actuator

Figure 2. 8CH 16A High Power Switch Actuato



Figure 3. 12CH 16A High Power Switch Actuator







Figure 4. Dimensions - Front View

Figure 5. Dimensions - Front View



M/R12.16.1 Figure 6. Dimensions - Front View




Figure 7. Dimensions - Side View

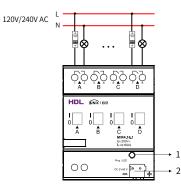


Figure 8. Wiring

#### Overview

KNX 16A High Power Switch Actuator (See Figure 1-3) adopts 50A magnetic latching relay, which has three types (4CH, 8CH and 12CH) of output circuits, and each channel outputs 16A current. This series of High Power Actuators have the characteristics of long life, low power consumption and fast execution speed.

#### **Functions**

- 16A High Power Switch Actuator includes 3 types: 4, 8 and 12 channels of actuator.
- Maximum output current of each channel: 16A.
- Control functions: Statistical ON time, Status response, Status recall, Staircase light, Flashing, ON/OFF delay, Protection delay, Scene control, Threshold function, Curtain control, etc.
- Logic function: AND, OR, XOR, Gate.
- Heating function: PWM(1bit/1byte) control output.

## **Important Notes**

- Programming This device is compliant with the KNX standard and can only be programmed by ETS software.
- Maximum output current of each channel: 16A, and a fuse/circuit breaker more than 16A should be connected to each channel for protection.
- Three phase connection This series of actuators support 3 phase input, take the 12CH actuator as an example, CH1, 4, 7, 10 connect to L1. CH2, 5, 8, 11 connect to L2. CH3, 6, 9, 12 connect to L3.

### **Product Information**

Dimensions - See Figure 4 - 7

Wiring - See Figure 8

- 1. Programming button/indicator: Red LED indicates programming mode.
- 2. KNX/EIB interface.

# Safety Precautions




- The installation and testing for the product must be carried out by HDL Automation Co., Ltd. or its appointed service agencies. The electric construction shall comply with local laws and safety regulations.
- The device should be installed in distribution box with DIN rail. HDL will not be responsible for any consequence caused by the inexpert or faulty installation and wiring methods, which are not in accordance with the instructions contained in this operating instruction.
- Please do not privately disassemble or replace any parts of the product. Otherwise, it may cause mechanical fault, electric shock, fire or personal injuries.
- Please contact our after-sales departments or our designated service agencies for your maintenance service. Product failures caused by private disassembly are not subject to this warranty.
- It is not allowed to exceed the range.

# **Package Contents**

KNX 16A High Power Switch Actuator\*1 / Label\*5 / Datasheet\*1

Figure 9



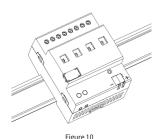



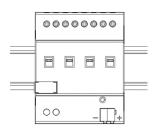


Figure 11

Figure 9 - 11. Installation

## **Technical Data**

Basic Parameters	
Working voltage	21~30V DC
Working current	15mA/30V DC
Input voltage	120V/240V AC, 50/60Hz
Communication	KNX
Cable diameter of KNX terminal	0.6-0.8mm
Rated switch current	16A lighting load, max inrush 500A
Operation times	>100,000
Line in/Line out terminals	2.5-4mm <sup>2</sup>
Output channel	4CH, 16A/CH; 8CH, 16A/CH; 12CH, 16A/CH
Capacitance	<300µF
External Environment	
Working temperature	-5°C~45°C
Working relative humidity	≤90%
Storage temperature	-20°C~60°C
Storage relative humidity	≤93%
Specifications	
Dimensions	M/R4.16.1 90 x 72 x 64(mm) M/R8.16.1 90 x 144 x 64(mm) M/R12.16.1 90 x 216 x 64(mm)
Net weight	M/R4.16.1: 257g M/R8.16.1: 577g M/R12.16.1: 823g
Housing material	Flame-retardant nylon
Installation	35mm DIN rail installation (See Figure 9 - 11)
Installation	

240V, 16A, Resistive, 100,000 cycles, 40°C;
240V, 16FLA/96LRA, Motor, 30,000 cycles, 40°C;
240V, 16A, Standard Ballast, 30,000 cycles, 40°C;
240V, 16A, Electronic Ballast, 6,000 cycles, 40°C;
120V, 16FLA/96LRA, Motor, 30,000 cycles, 40°C;
120V, 16A, Electronic Ballast, 6,000 cycles, 40°C;
120V, 16A, Standard Ballast, 30,000 cycles, 40°C;

### **Approved**

CE, RoHS

KNX

# **KNX Cable Guide**

KNX	KNX Cable
	Black
+	Red

## Installation

Installation - See Figure 9 - 11 (Take M/R4.16.1 as an example)

- Step 1. Fix the DIN rail with screws.
- Step 2. Buckle the bottom cap of the actuator on the edge of the DIN rail.
- $Step \ 3. \ Press \ the \ device \ on \ the \ DIN \ rail, slide \ it \ and \ fix \ it \ up \ until \ an \ appropriate \ position \ is \ adjusted.$

#### Technical support

E-mail: hdltickets@hdlautomation.com Website: https://www.hdlautomation.com

©Copyright by HDL Automation Co., Ltd. All rights reserved. Specifications subject to change without notice.